


Speaker Stand (Granite or Steel version)

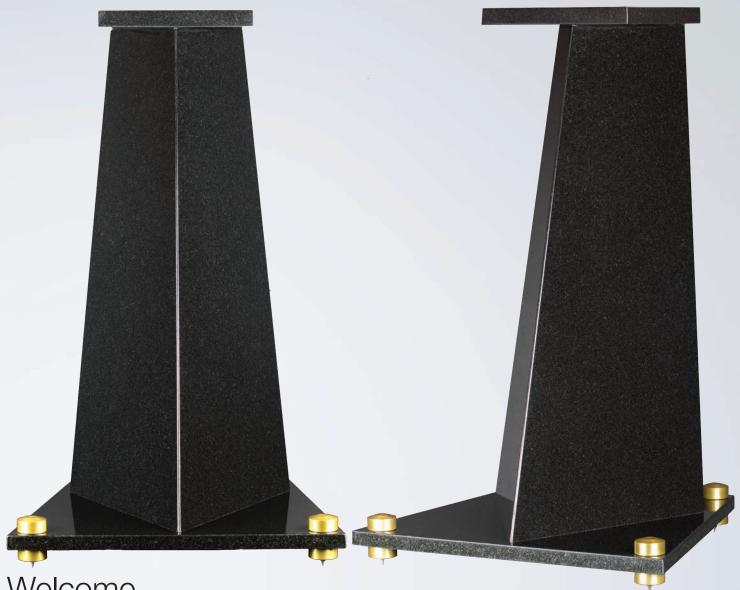

Welcome

Thank you for selecting Acora Acoustics as your stand for your stand mount loudspeaker. The SRS has been designed to bring you closer to your music by using granite and steel construction built by stone artisans with decades of experience.

Please read through this manual to ensure you get the most from your speakers. The SRS is partially granite enclosure, is quite heavy and should not be placed or re-positioned by a single person, seek qualified assistance such as your Acora Acoustics dealer or consultant.

We suggest the following:

- 1) Thoroughly read through this manual
- 2) Follow the unpack instructions and follow your speaker's placement instructions.

Each Acora Acoustics product has been inspected and packaged with care.


Unpacking and Initial Placement

Each Acora Acoustics product has been inspected and packaged with pride. Please verify that both crates are in good condition.

- 1) Remove the stand from the carton by removing the 4 clips at the bottom edges of the carton (see below), then lift the top straight up and off.
- 2) Grasp the stand either by the speaker platform or the base and lift out of the bottom.
- 3) Visually inspect the stand for any transit damage.
- 4) Place the stands on level flooring and use the furniture sliders as you position them.
- 5) For initial positioning, place the speakers per their instructions
- 6) Connect your speakers to your amplifier and perform initial listening tests. This very well may not be their final position.
- 7) Once you believe placement is set, remove the furniture sliders. If on carpet, also remove the acorn nuts concealing the spike tips (caution, tips are sharp). The spikes will also allow you to ensure the speakers are level. If the speakers are not level, unscrew and remove the spike cap. This will expose the top of the spike. Using a flat head driver, adjust the spikes until the speaker is level and stable (it should not rock from back to front or side to side).
- 8) Once level and stable, replace the spike caps and tighten them.

Listen and enjoy. You may find over time that you want to re-adjust speaker placement, again, please do not attempt this alone.

- 1) Pinch the two vertical ribs so the bottom swings out from the base.
- 2 Swing the paddle up and pull entire clip out when it becomes free.
- 3) Save these clips for future use

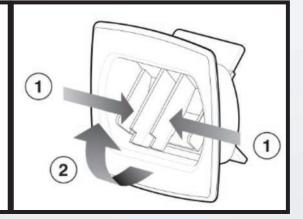

Please, Enjoy!



Acora Acoustics -HEAR THE TRUTH-

165 Milner Ave Scarborough, ON, Canada M1S 4G7 (647) 812-3933 info@acoraacoustics.com